

# Technical Manual for the RTCU CX1i flex

Version 2.01



## Introduction

This manual contains technical documentation allowing easy installation and use of the RTCU CX1i flex unit. For information on the programming and software configuration of the unit please refer to the RTCU IDE documentation.

The RTCU CX1i flex is a compact, waterproof and ruggedized telematic tracking and control platform, based on the powerful X32-architecture also found in the popular MX2i Series. In addition to a long list of standard features the RTCU CX1i flex sports a state of the art 66-channels SuperGPS receiver with unprecedented performance and an on-board advanced 3D-movement sensor.

The product is especially suited for mobile tracking applications with its on-board GPS-receiver and advanced power-management features. The unit is fully supported by the RTCU IDE development tool and is fully back-ward compatible with current and previous generation of RTCU units.

The RTCU CX1i flex offers a unique and outstanding approach allowing seamless upgrade with new hardware options – even after the product has been installed in the field! With a fully upgraded RTCU CX1i flex the functionality is approaching that of RTCU CX1i pro – merely lacking the RF transceiver and SD-CARD reader!

The advanced power-management features on the RTCU CX1i flex combined with the on-board Li-Ion battery allows the unit to stay in power-saving mode for a longer period of time still being connected to the GSM network and capable of waking up on for example GSM activity, change of digital inputs or the 3D-movement sensor. These features open up for the use of the RTCU CX1i flex in exciting new application areas where extremely low power consumption and flexible wake-up conditions are crucial parameters for successful product integration.

The RTCU CX1i flex includes many sophisticated standard features and can be further upgraded as required with the following hardware features:

The following hardware options are available:


- **I/O Option:** Full I/O: 2 digital inputs, 2 digital outputs and 1 analog input.
- **Communication option:** RS232 / 1-Wire / Fleet-management support.
- **Performance option:** Very fast execution (48 Mhz) and enhanced memory.

Options can be applied on-demand even remotely by the unit already installed in the field.


## Table of Contents

Introduction .....	2
Table of Contents.....	3
Graphical view.....	4
External connections.....	5
Overview .....	5
Power supply .....	6
Digital Outputs (available with I/O option).....	7
Digital Inputs / Ignition Input .....	7
Analog Input (available with I/O option) .....	8
Serial port (available with communication option).....	8
1-wire (available with communication option) .....	8
USB programming port .....	8
3D-movement Sensor .....	8
Indicators (LED's).....	9
System switch (RST).....	10
Internal Li-Ion battery .....	11
VFRAM persistent memory .....	12
Execution speed and enhanced memory .....	12
Antennas .....	13
GSM .....	13
GPS.....	13
Barcode.....	13
Power consumption.....	14
Specifications for the RTCU CX1i flex.....	15
Specifications for the 66-channels SuperGPS receiver.....	16
Appendix A – Assembling/Disassembling of the Unit.....	16
Appendix B – Installing the SIM card .....	16
Appendix C – Applying on-demand hardware options .....	16
Appendix D – Unpacking of boxed RTCU CX1i flex.....	16
Appendix E – CX1i flex mounting drawing .....	16

### Graphical view

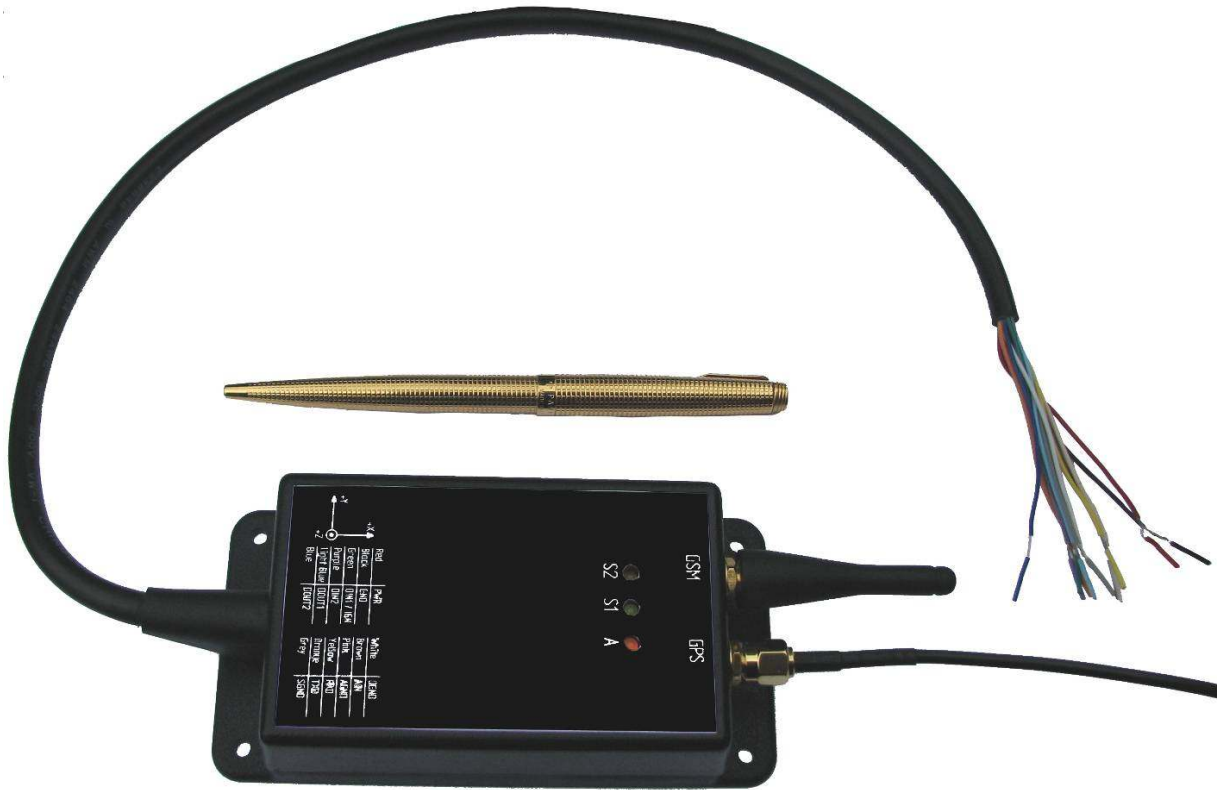

*(Note: Please remove the protective foil on the surface of the unit before use)*

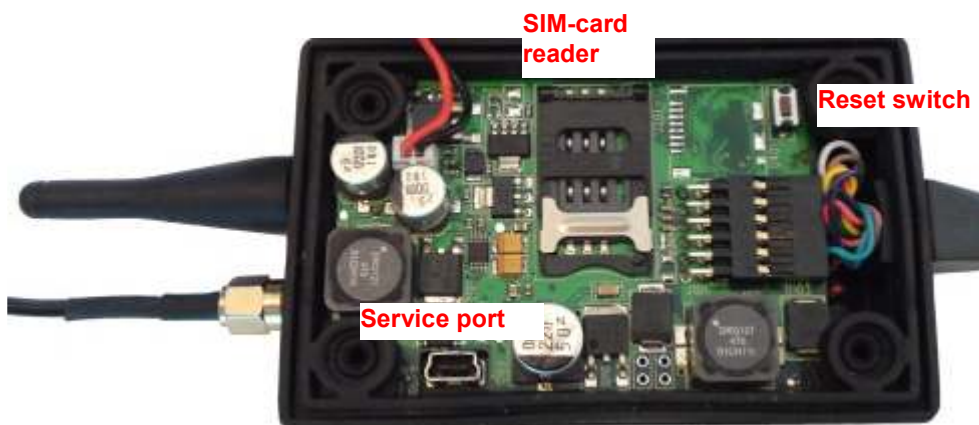

## External connections


### Overview

Connections to external equipment are done via the connectors/cables located back and forth on the product. All connections are available externally for easy access. The front side is equipped with a SMA female Quad-band GSM antenna connector, and a SMA female GPS antenna connector. In the back side the interface cable to the unit is located. The interface cable is color coded and includes power supply, digital input/output interfaces, analog input interface and serial communication interface.


A graphical overview of the front, back and top side is shown below:



Front-side view

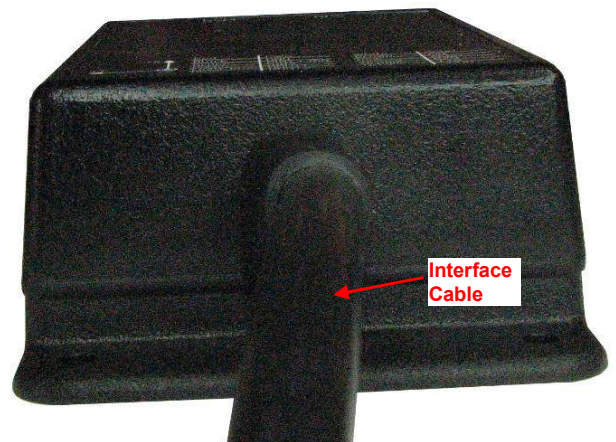

Back-side view

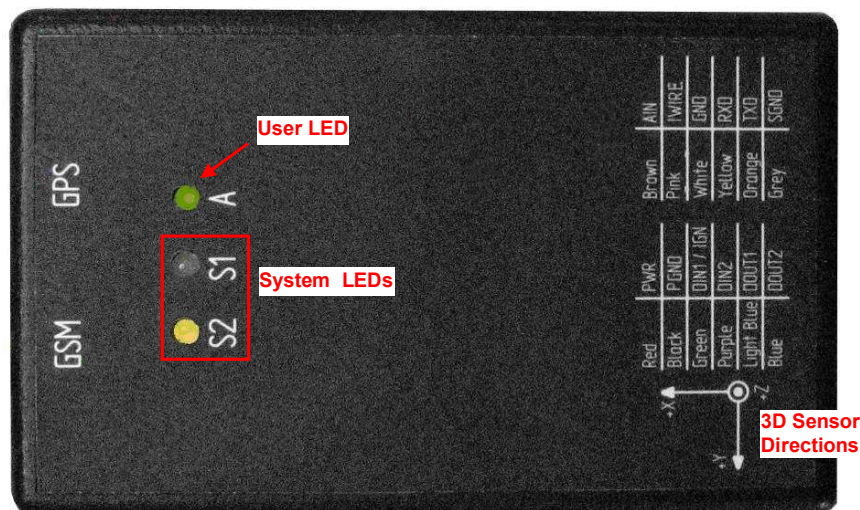

Top-side view

**Interface cable overview.**

Color	Name	Description
Red	PWR	Power supply, positive (+) connection
Black	PGND	Power supply, negative (-) connection
Green	DIN1 / IGN	Digital input 1, ignition input
Purple	DIN2	Digital input 2 ( <i>I/O option</i> )
Light Blue	DOOUT1	Digital output 1 ( <i>I/O option</i> )
Blue	DOOUT2	Digital output 2 ( <i>I/O option</i> )
Brown	AIN	Analog input ( <i>I/O option</i> )
Pink	1Wire <i>New!</i>	1-Wire bus for ID-Button/temperature sensor etc. ( <i>communication option</i> )
White	GND	Digital ground
Yellow	RXD	Receive Data for RS232 serial port 1 ( <i>communication option</i> )
Orange	TXD	Transmit Data for RS232 serial port 1 ( <i>communication option</i> )
Grey	SGND	Signal ground

**Power supply**

The RTCU CX1i flex unit is to be supplied with 8..36 VDC from an external DC power source connected to the power cables in the interface cable. Positive power is applied to the red colored cable and ground is connected to the black colored cable.

There are three different labels for the ground connections: Power Ground (PGND), Signal Ground (SGND) and I/O Ground (GND). The signal and I/O grounds are filtered from the power ground. Power ground must only be used as power supply return path. The signal ground is used as ground reference for serial interfaces, and I/O ground used by both digital and analog I/Os, and 1-Wire bus.

The RTCU CX1i flex has a protection circuit on the supply lines which includes protection against wrong polarity, electrical disturbances, conducted transients and load-dumps that can occur in a vehicle.

The RTCU CX1i flex also contains an internal backup battery, which will supply the RTCU if the external power supply should fail or be disconnected. By default the RTCU is powered down when a power fail occur. This setting however can be changed. Please consult the RTCU-IDE online help for more information.

When the ignition input is activated with a logical high, the RTCU unit will wake-up if it was in power down mode.

### **Digital Outputs (available with I/O option)**

The digital outputs control two “high-side” switches. They function like a contact, where one side is connected to the positive supply of the RTCU unit, and the other is the output. The switches are protected against short circuit, ESD and electronic kickback from inductive loads such as relays etc. The maximum switch-able inductance is 20mH and must not be exceeded.

The digital outputs are supplied through the power cable in the interface cable, which also supplies the rest of the RTCU unit. As the power is also the RTCU CX1i flex main power, a power-fail would also affect the digital outputs.

The RTCU unit offers a very advanced power management, which makes it possible to have one or more outputs enabled while the RTCU is in low power mode. Please consult the RTCU-IDE online help for more information.

**Please note:** Special attention to wiring must be taken; if the total current consumption of the digital outputs exceeds 1A then power supply ground (PGND) must be used as return path for the output(s) in order to avoid temperature increasing in the enclosure.

### **Digital Inputs / Ignition Input**

The digital inputs are all low-pass filtered and transient protected. To activate the inputs, connect a positive voltage between the input and the GND connector.

*Digital input 2 is only available with the I/O option.*

**Please note:** The DIN 1 / IGN input is a special input as it also functions as the ignition input. If the ignition input is activated with a logical high or low (Wait For Event mode only) when the RTCU is in low power mode, it will wake-up the unit. A power apply will also wake-up the unit if it is in power-down mode or WaitForEvent mode with power Apply and/or ignition selected for wake-up. The ignition is de-bounced with a period between 1-2 ms when used as a digital input. So any logical level applied to this input must be longer than 2 ms to be valid.

The power management allows the possibility to configure a wake-up on one or more digital inputs with individually configured falling- or rising edge detection. Please consult the RTCU-IDE online help for more information.

*To support backward compatibility with the RTCU MX2i series DIN 1 / IGN can also be addressed as DIN 5 from the VPL application.*

### **Analog Input (available with I/O option)**

The analog input is voltage input with a range from 0V to 10V DC. The analog voltage is converted to a digital value with a resolution of 10bit or 1024 in decimal. The decimal value with 10V applied to the input is 1023 and 511 for 5V.

The input signal is connected between AIN and GND. GND must be connected to the reference of the connected equipment. Please be aware that deviations may occur, as the system is very noise sensitive. Avoid long unshielded wires and large fast-changing signals routed parallel to the analog signals.

The inputs are low-pass filtered, ESD- and transient protected.

### **Serial port (available with communication option)**

This port is a general-purpose RS232 serial port and does not support handshaking. With the RS232 serial port it is possible to interface with Garmin Fleet Management.

### **1-wire (available with communication option)**

The 1-Wire bus is available on the interface cable. All 1-Wire communication goes through single pin and all 1-Wire devices connected to this pin retrieves its power directly from the bus (called parasitic power). By this only two wires are needed – the 1-wire signal and the ground reference – allowing minimal cable installations.

**Please Note:** 1-Wire ID-Button reader is supported by the CX1i flex, except for the LED.

Further information regarding 1-wire networks, topology and limitations can be found in the application note area on the Logic IO webpage.

### **USB programming port**

The USB port is for programming and communicating with the RTCU IDE (RACP compliant application). A standard mini-USB cable can be used between the unit and the PC. For location of the service port connector please refer to the graphical view section.

### **3D-movement Sensor**

The RTCU CX1i flex unit contains a 3D-movement and vibration sensor. It makes it possible to detect movement and position change in 3 directions, X-Y-Z, and vibration through the power management when for example the vehicle is moved. The sensitivity and thresholds for different directions can be altered from within the VPL program - making it suitable for various applications. Please consult the RTCU-IDE online manual for more information.



## Indicators (LED's)

Two bi-colored (red and green) and a single yellow LED indicators are present on the top side of the unit (see external connections overview). One bi-colored LED (A) is available to the user and the remaining two LED's (S1 and S2) are signaling the status and possible errors of the RTCU unit.

The user control LED one and two for application specific signaling purposes.

- LED named A on the top side of the RTCU unit, consists of LED 1 (green) and LED 2 (red)

They are easily accessed from within the VPL program, and it is possible to mix the LED's to obtain a third color, yellow. Please consult the RTCU-IDE online manual for more information.

The remaining two LED's are used by the RTCU to signal the status of the unit. The different patterns are listed in the table below. If the color of the system LED 1 (S1) is yellow, the unit is actively communicating with for example the RTCU-IDE program (or another program, supporting the RTCU protocol, RACP).

### S1: System LED1 pattern overview.

Pattern	Description
Fastest blinking, green	The unit is initializing, preparing to start the VPL program
Fast blinking, green (or yellow)	The VPL program is not executing, but stopped by the reset/diagnostic switch.
500ms On / 500ms Off green (or yellow)	The unit is executing the VPL program
1.5s On / 0.5s Off. green (or yellow)	The unit is executing the VPL program and charging the internal back-up battery.
Fast blinking, red (or yellow)	A runtime error has been detected in the program. Use the RTCU IDE to obtain the fault log.
Alternating Fast/Slow, red (or yellow)	The unit has lost its Firmware! This can only happen if, during a firmware upgrade, the RTCU Unit loses power, or the communication is lost completely. In this case, simply upload the firmware to the unit again.
75ms On / 925ms Off	Execution speed is different from full-speed.

The single yellow LED (S2) is signaling either the GSM module activity or if all other LED's are off it will signal that the RTCU is in the "wait for event" low power state. Please see the table below:

**S2: System LED2 pattern overview (GSM activity and "Wait For Event")**

Pattern	Operating Status
Off	The GSM module is turned off
600 ms On / 600 ms Off	No SIM card inserted or no PIN code entered, or network search in progress, or ongoing user authentication, or network logon in progress.
75 ms On / 3 s Off	Logged to the network. No call in progress.
75 ms On / 75 ms Off / 75 ms On / 3 s OFF	A GPRS session is active
Flashing	Indicates GPRS data transfer.
On	Connected to remote party for datacall or exchange of parameters while setting up or disconnecting a call.
8 s OFF / 10 ms ON	The RTCU unit is in "Wait For Event" low power state.

**System switch (RST)**

The RTCU CX1i flex unit contains a combined reset/diagnostic switch. This switch is located inside of the RTCU unit (see the graphical view).

By activating the switch shortly the RTCU unit will do a complete reset, as if the power was removed and reapplied. If the reset switch is held down for approx. 3 seconds<sup>1</sup> the VPL program/project uploaded to the unit will not be started and the unit will turn on the GSM module and establish connection to the GSM network and to GPRS / Gateway (if configured). This method will also activate the unit if it is powered down due to a power fail. The feature is very helpful when maintenance without power is needed. To "exit" (power down the unit again) from this mode simply activate the reset switch shortly. The status indicator indicates the state by fast blinking green or yellow as stated above.

<sup>1</sup> System LED S2 will flash three times when this state is entered.

### Internal Li-Ion battery

The RTCU CX1i flex contains an internal Li-Ion battery for operation even during an external power fail. Making it possible to report power losses etc. Please note that when external power is removed the unit will by default be powered down. This setting can be changed though and is documented in the RTCU-IDE online manual. The digital outputs are also disabled when a power fail occurs, due to that the power supplies both the digital outputs and RTCU unit itself.

The battery charging is completely automated and handled internally by the RTCU unit – leaving no need for user interaction. Different kinds of functions (Battery Low, Charger Enable, Charging status etc) are available for the user though. Please consult the RTCU-IDE online manual for more information.

The charge current is very high, for shorter charge time, as specified in the technical specifications; Make sure both power supply and cables can handle the high current.

The battery will be charged whenever a power fail has occurred to establish the capacity making the battery ready for the next power fail. A maintenance charge will start every 100-hour after the last charge. This is to compensate for the battery self-discharge etc.

As standard the battery cannot be charged above 45°C or below 0°C, but the RTCU utilizes an advanced charging algorithm allowing charging down to -10 °C.

The RTCU unit will automatically detect the temperature and terminate the charge process if the temperature is out of range.

The temperature has very high influence on the battery capacity. At 0°C the capacity has dropped to 60% of the initial capacity and it falls dramatically at lower temperatures.

The battery cycle (numbers of charges and discharges) has also influence on the capacity. After 300 cycles the capacity has dropped to approximately 80% of the initial capacity.

#### **Warning:**

Misusing the RTCU CX1i flex unit may cause the built-in battery security circuit to be damaged.

- Do not place the RTCU unit in high temperature locations such as direct sunlight or near engines. Using the RTCU unit in this environment may result in loss of battery performance and a shortened life expectancy.
- Do not allow the battery to get wet.
- Avoid strong impacts and shocks.

For more information regarding the environmental limitations see “Specifications for RTCU CX1i flex” below or consult the RTCU CX1i flex datasheet.

## VFRAM persistent memory

The RTCU CX1i flex utilizes Virtual FRAM for persistent storage in contrast with the RTCU CX1i pro/pro-c that utilizes true FRAM.

VFRAM is residing in the RAM memory of the unit during execution and when the unit shuts down the content will be automatically saved to flash memory. When the unit starts again the content will be automatically loaded into RAM again before the VPL application executes.

**Using VFRAM is 100% identical to FRAM, but to avoid data loss or corruption it is very important not to remove the battery at the same time as the external power is removed.**

## Execution speed and enhanced memory

The RTCU CX1i flex executes by standard at the speed of 24 Mhz, but by applying the **performance option** the execution speed can be doubled to the full speed of 48 Mhz. When the VPL application selects full speed by using the pmSetSpeed(speed:=4) the unit will actually operate at speed=3 which corresponds to 24 Mhz. When the performance option is applied the unit will automatically start to operate at speed=4 without program changes.

The RTCU CX1i flex only supports the X32 enhanced memory after the **performance option** has been applied.

The X32 performance option has the following advantages:

- Size of application is expanded from 250 Kbyte up to maximum 640 Kbyte.
- Size of RAM memory is expanded from 54 Kbyte to 193 Kbyte.

For information how to apply the performance option, please see Appendix C.

## Antennas

### GSM

The RTCU CX1i flex unit contains an SMA Female connector for connection of a suitable GSM quad band antenna (850/900/1800/1900 MHz). When installing the antenna, please make sure that the antenna is not in close proximity of metallic parts or anything else that can influence the efficiency of the GSM antenna. The unit may be delivered with a standard antenna already mounted (see Appendix D).

### GPS

The RTCU CX1i flex unit contains an SMA Female connector for connection of a suitable GPS antenna. The GPS antenna must be a 3V active GPS antenna mounted with a SMA Male connector.

When installing the antenna, please make sure that the antenna has a reasonable view of the sky so that it can receive the weak signals from the satellites. The unit may be delivered with a standard antenna already mounted (see Appendix D).

## Barcode

The barcode found on the CX1i flex unit contains the serial number. A short format with total length of 9 digits is used. The 9 digits of the barcode are equal to the unit serial-number. The first three digits in the short format serial-number identify the unit type, and for the RTCU CX1i flex this unique code is 251.

**The barcode format used:** 2/5 Interleaved with Check Digit

## Power consumption

Detailed information on the maximum power consumption of the CX1i flex unit in different states and at different supply voltages is listed below.

### Maximum power consumption: Unit running on external supply.

	8V	12V	36V		
Unit Active	70	50	20	mA	
Unit Active with GSM On	90	60	25	mA	GSM idle @ -63dBm
Unit active with GPS On	90	60	25	mA	
Unit Active with GSM/GPS On	110	75	35	mA	GSM idle @ -63dBm
Unit Active while charging	520	500	190	mA	
Unit in power-down	0.9	0.6	0.3	mA	Restart on Ignition, RTC
Unit in "wait for event"	0.9	0.6	0.3	mA	Resume on DI, Vibration, RTC
Unit in "wait for event"	11	7	3	mA	Resume on RS232
Unit in "wait for event"	25	20	7	mA	Resume on GSM activity



If the external power source is removed and the internal battery is enabled the power consumption from the battery will be as listed below.

### Maximum power consumption: Unit running on internal battery.

	BAT		
Unit Active	90	mA	
Unit Active with GSM On	110	mA	GSM idle @ -63dBm
Unit active with GPS On	110	mA	
Unit Active with GSM/GPS On	130	mA	GSM idle @ -63dBm
Unit in power-down	1	mA	Restart on Ignition, RTC
Unit in "wait for event"	1	mA	Resume on DI, Vibration, RTC
Unit in "wait for event"	15	mA	Resume on RS232
Unit in "wait for event"	35	mA	Resume on GSM activity

**Note:** Power consumption from a fully charged battery.

## Specifications for the RTCU CX1i flex

	Min	Typ	Max		
Operating Voltage	8	-	36	VDC	Protected against wrong polarity.
On-board Li-Ion Battery Pack		800		mAh	Low-temperature charging possible.
Unit Active		50		mA	<i>Typical measurements @ 12 VDC Supply.</i> GSM idle @ -63 dBm  GSM idle @ -63 dBm  Restart on: Ignition and RTC Resume on: DI, 3D accel., RTC Resume on: RS232 Resume on: GSM
Unit Active with GSM On		60		mA	
Unit Active with GPS On		60		mA	
Unit Active with GSM/GPS On		75		mA	
Unit Active while Charging		500		mA	
Unit in Power-down		0,6		mA	
Unit in "Wait for Event"		0,6		mA	
Unit in "Wait for Event"		7		mA	
Unit in "Wait for Event", GSM On		20		mA	
I/O:					<ul style="list-style-type: none"> <li>Digital inputs are protected against transients and low-pass filtered.</li> <li>Digital outputs are short-circuit, transient and ESD protected.</li> <li>Digital Output current is per channel</li> <li>Analog input resolution is 10 bits. Input are protected against transients / low-pass filtered.</li> </ul>
Digital input logic "high"	8	12	40	VDC	
Digital input logic "low"	-5	-	3	VDC	
Digital output voltage	-	-	36	VDC	
Digital output current	-	-	750	mA	
Analog input	0	-	10	VDC	
3D Movement Sensor:					3-axis digital accelerometer with hardware buffer.
Resolution	12 bit @ +/- 16g				
GPS:					Supports SBAS (WAAS, EGNOS, MSAS)
• Channels	66 Channels SuperGPS				
• Tracking Sensitivity	-165 dBm				
Storage temperature:	-30	-	+65	°C	External color coded wires and LED's: <ul style="list-style-type: none"> <li>Power</li> <li>Digital I/O and analog input</li> <li>1-Wire interface</li> <li>Two Bi-color LED and one yellow status LED</li> <li>SMA connector for GPS / GSM antennas</li> <li>Delivered GSM/GPS antennas pre-mounted.</li> </ul> Internal interfaces: <ul style="list-style-type: none"> <li>Mini USB programming connector.</li> <li>Standard 3 Volt SIM Card Reader</li> </ul>
Operating temperature (According to GSM 11.10 specification)	-25	-	+55	°C	
Restricted operation (deviations from the GSM specification may occur)	-30	-	+65	°C	
Charging Temperature	-10	-	+45	°C	
Humidity (RH non condensing)	5	-	90	%	
Weight (with antennas/cable)	0.250			Kg	
External dimensions	W 92 x H 30 x D 58 mm				Excluding mounting flanges
Ingress Protection (IP)	IP-66				Black UL94 plastic enclosure.
Approvals	EN-61000-6-3;2001 Emission EN-61000-6-2;2001 Immunity				 10R-036481 

Technical data subject to change

## Specifications for the 66-channels SuperGPS receiver

### MediaTek MT3329 Single Chip SuperGPS

General:	66 Channels simultaneous operation A-GPS capable L1 frequency (1575.42MHz), C/A code Continuous tracking receiver	
Update Rate:	NMEA @ 1 Hz	
Accuracy:	Position	<2.5m CEP
	DGPS/SBAS	<2.5m CEP <sup>2</sup>
Sensitivity:	Tracking/navigation	-165 dBm
	Reacquisition	-160 dBm
	Cold Start (Autonomous)	-148 dBm
	<i>(GPS chipset reference parameters)</i>	
Time-To-First-Fix: <sup>3</sup>	Autonomous Operation in Standard Sensitivity Mode	
	Reacquisition	< 1 sec.
	Hot Start	< 1 sec.
	Aided start	< 3 sec.
	Warm start	32 sec.
	Cold start	32 sec.
Interface protocol:	NMEA 0183 v3.0 with GGA, VTG, GLL, GSA, GSV and RMC	

#### Definitions:

##### Reacquisition:

Time to get a fix when signal has been blocked for a short period of time.

##### Hot Start:

The GPS has been powered down for less than 2 hours and the stored position and time are valid

##### Aided Start:

The GPS has valid A-GPS information. A-GPS is currently unsupported in the standard firmware.

##### Warm Start:

The GPS has been powered down for more than one hour, but has stored information about its current position and time

##### Cold Start:

The GPS has no valid navigation data.

<sup>2</sup> Depends on accuracy of correction data provided by the SBAS service


<sup>3</sup> All satellites at -130 dBm




## Appendix A – Assembling/Disassembling of the Unit

In order to comply with IP-66 the SIM-Card reader and Service port connector (mini-USB) are mounted inside the enclosure. User may need to open the enclosure in order to get access to these connectors. The following steps describe assembling and disassembling the enclosure:

1. Remove the back plate of the RTCU CX1i flex. The four screws are located at the corners of the back plate as shown below:

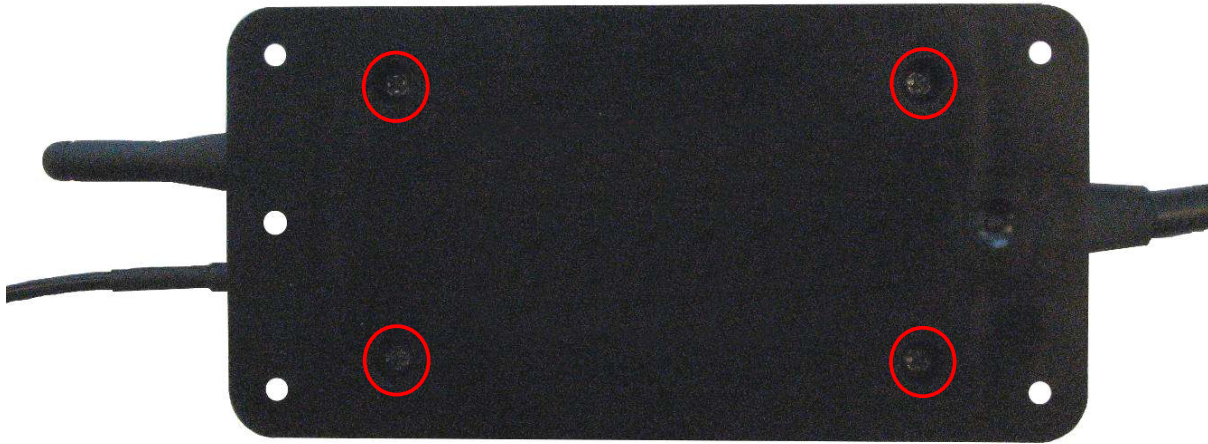

2. Gently lift the back plate. Please note, that the internal backup battery is mounted on the back plate and connected to the unit with short cables. If the necessary precaution is not taken when removing the back plate the battery, battery cable or the unit may be damaged. The open enclosure should look like this:

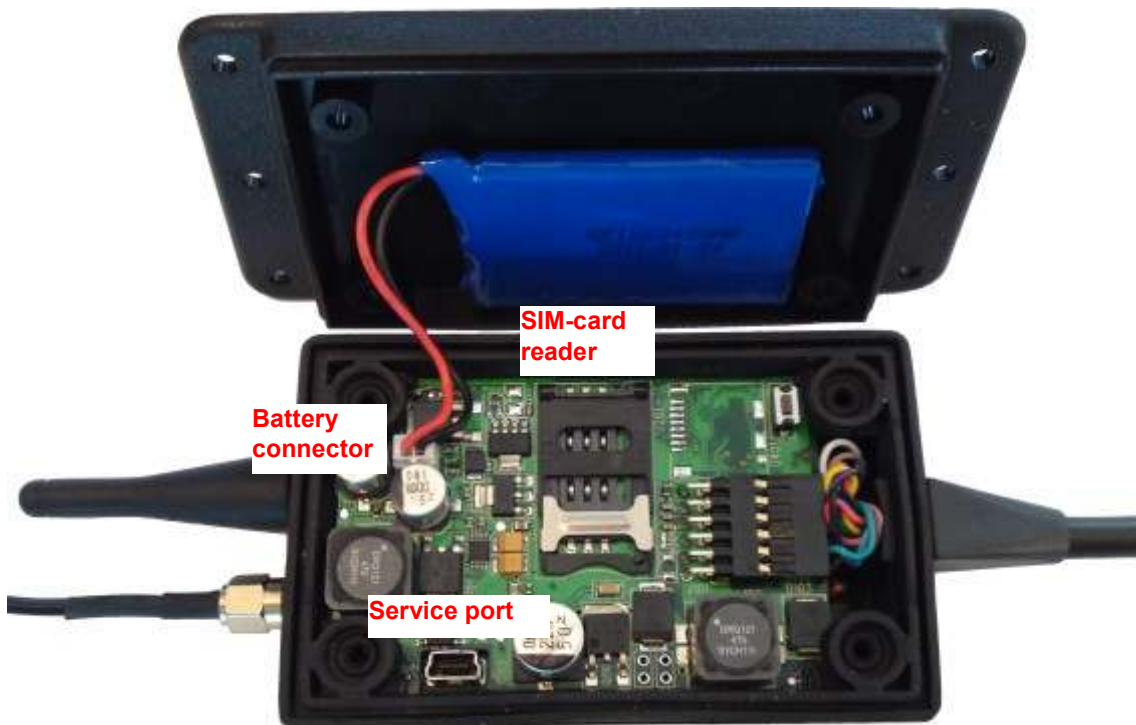

3. To avoid the damaging the battery cable or connector it is advised to detach the battery cable.

Assembling of the enclosure is the opposite order of disassembling.


**Please note:** The rubber seal **must** be mounted and aligned correctly before closing the enclosure. The interface cable mould has a cut-out for the sealing rubber. The rubber must be fitted properly in it in order to achieve IP-66.

## Appendix B – Installing the SIM card


The SIM card reader is a lid based type with a mechanical lock for secure installation of the SIM card.

Open the hinged lid of the SIM card reader, orientate the card as showed below, and insert it into the lid of the card reader. Close the lid, and slide the metal locking mechanism to the locked position as shown with an arrow and text on the lid, until a click is heard.

To remove the card slide the metal locking mechanism to the unlocked position as shown with an arrow and text on the lid, and open the lid. The SIM card can now be removed.

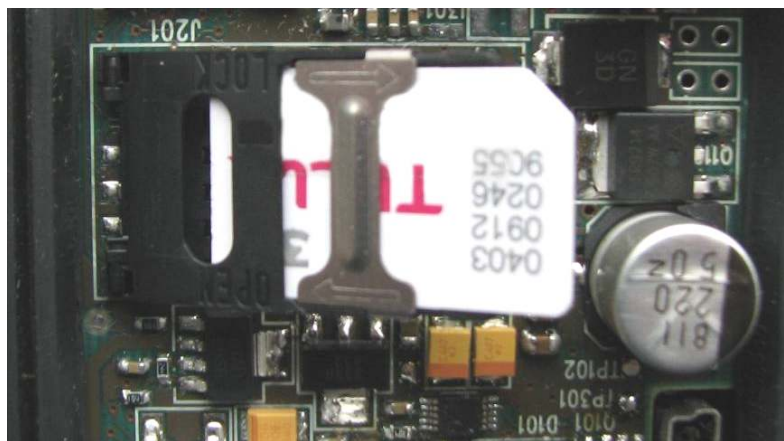

**SIM card orientation.**

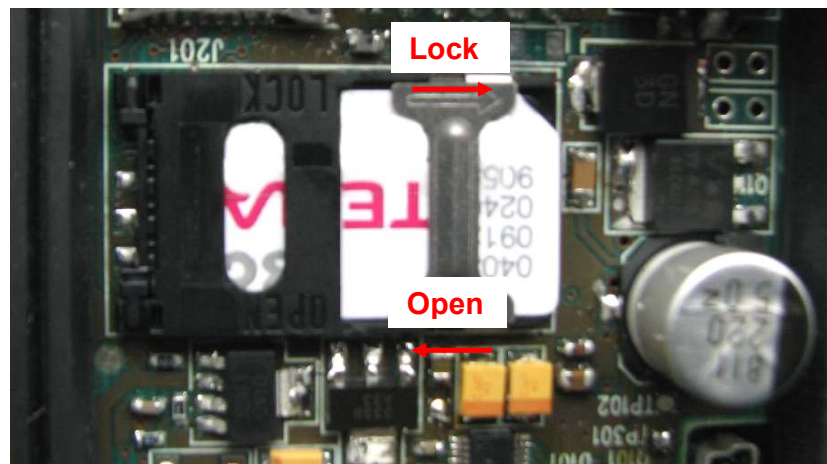

**SIM inserted and locked**

## Appendix C – Applying on-demand hardware options

The RTCU CX1i flex utilizes a state of the art on-demand option concept allowing actual hardware options to be applied to the unit at installation time - or even over the air after installation.

The following upgrade options are available:

### I/O Option

The RTCU CX1i flex has by standard 1 digital input. Applying the I/O option will expand the available I/O to: 2 digital inputs, 2 digital outputs and 1 analog input.

### Communication option

The RTCU CX1i flex does not by standard support the RS232 and 1-wire interfaces nor the Fleet Management interface. By applying the Communication option the unit will support RS232 /1-Wire as well as the Fleet Management interface.

### Performance option

By applying the performance option the unit will support execution at full execution speed (48 Mhz) and also the X32 enhanced memory will be available. See the section *Execution speed and enhanced memory* for more information.

From within the RTCU IDE on-demand options can be requested and applied to the RTCU CX1i flex unit connected. When a unit option is requested the option server at Logic IO is contacted over the Internet using the supplied account credentials. If there is sufficient credits for the requested option(s) the transaction will be made and the unit options activated.

To use the request unit option functionality it is therefore necessary to have an account with a positive credit established at Logic IO with a given username/password.

By using the `boardRequestOption()` the RTCU CX1i flex unit can also request on-demand options directly with no user intervention.


Please see the RTCU IDE on-line help for additional information.

## Appendix D – Unpacking of boxed RTCU CX1i flex

The RTCU CX1i flex is typically delivered as a boxed product with GSM and GPS antennas all included in a carton box, as shown below:



1. To unpack the box open the carton and remove the unit

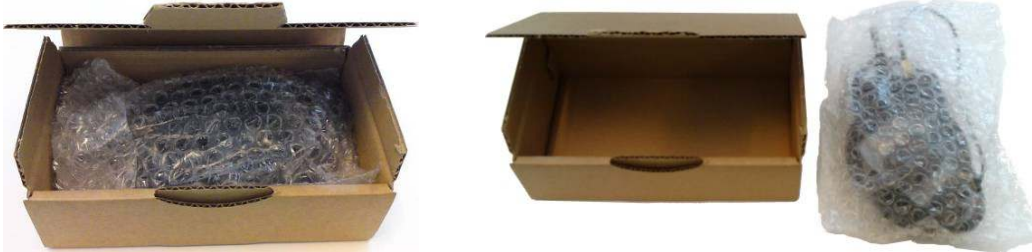

2. Remove the unit from the bubble plastic bag



3. To prepare the unit for the SIM card follow the guides:
  - Appendix A – Assembling/Disassembling of the Unit  
(Please notice the screw has been replaced by the rubber band)
  - Appendix B – Installing the SIM card
4. Insert the screws from the plastic pack at the back of the unit and fasten tight.



5. Remove the rubber band.
6. Remove the protective foil from the front label.



7. The unit is now ready for use. When installing the device please take notice the following consideration.

a. **GPS antenna.**

The GPS antenna should be placed with free access to GPS satellite reception. The optimal position is with a full view of the sky and with the “GPS” text pointing up and the magnetic part facing down.



b. **GSM antenna.**

The GSM antenna is mounted directly onto the unit and therefore the entire unit should not be surrounded by metal surfaces as it may reduce the reception performance in areas with weak signals.

Alternative GPS or GSM antenna may be used when required.

### Appendix E – CX1i flex mounting drawing

Below drawing shows the placement of the mounting holes on the back plate of the unit:

